

name:


POSTS

SKU:


SZ001-4

description:

The device affects the muscles of the legs, arms and hips.

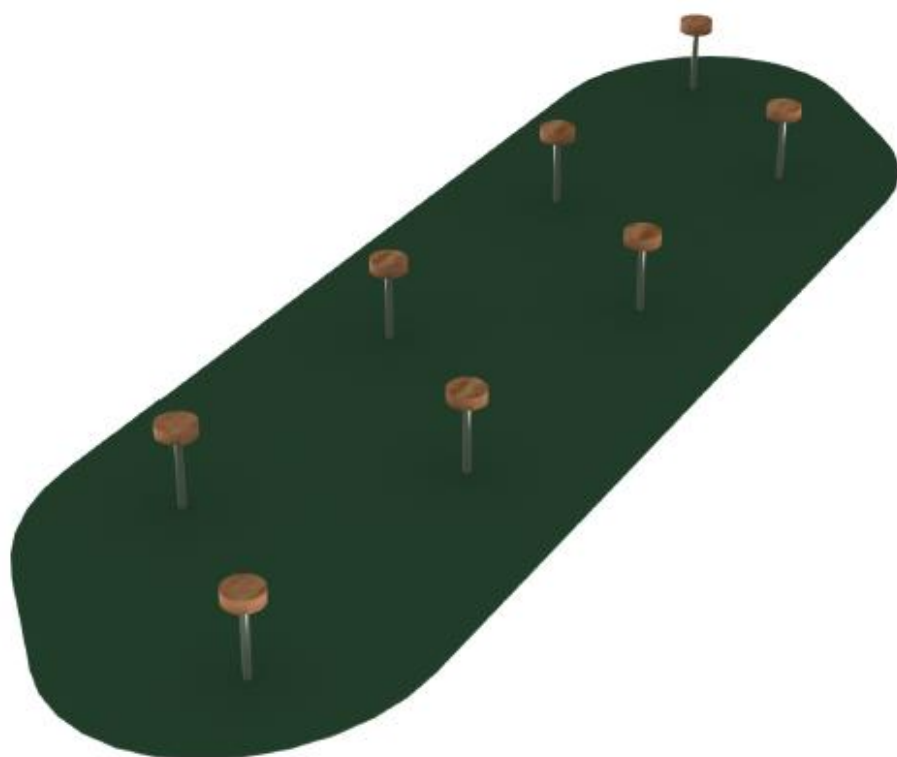

terms of use:

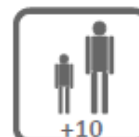

dimensions (L x W x H):

750 x 150 x 70 cm

safety zone:

1050 x 450 cm

technical specifications:

- Eight wooden discs \varnothing 30 cm fastened to the posts of hot-dip galvanized steel
- posts fixed in the ground for the concrete foundations 0,3 x 0,3 x 0,7 m
- Impregnated surface
- Wood is FSC certified (Forest Stewardship Council) - comes from controlled cultivation, carried out in accordance with the global forest protection program

installation:

1. Determine with the investor (or his representative) the place of installation and clear the area.
2. Dig pits under the footings according to recommendations of the supplier and guidelines of the relevant standard.
3. Place the device in dug pits, re-level and pour the foundation (B25), re-level again.
4. When the concrete is bound (after minimum 24 hours, depends on weather conditions and time of year), check the stability of the device.
5. Clean up the area.